
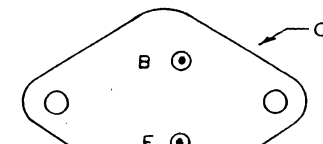
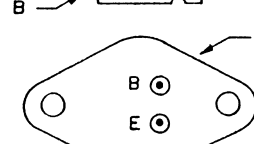



**NOTE: ASSEMBLY PROCEDURE**  
(4 PLACES)

TIGHTEN HEX HEAD SCREW AND NUT #1 FIRST - DO SO BY TURNING THE HEX HEAD SCREW RATHER THAN THE NUT. USE 16 IN./OZ TORQUE.

AFTER ASSEMBLING REMAINING COMPONENTS AND TRANSISTORS TIGHTEN NUT # 2 USING 16 IN./OZ TORQUE.

TRANSISTORS Q3, Q4 AND Q5 MOUNTING NUTS AND SCREWS ARE TIGHTENED BY TURNING THE NUTS. USE 9 IN./OZ TORQUE.

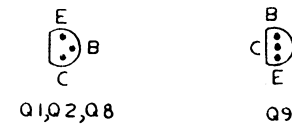

**BOTTOM VIEWS**

THE STANDEL CO. EL MONTE, CALIF.		
SCALE: 2 X	APPROVED BY:	DRAWN BY HMM
DATE: 5/11/71		REVISED
POWER AMPLIFIER PICTORIAL		
		DRAWING NUMBER 21-29E